

ADX212/218 CONDENSER MICROPHONES

OVERVIEW:

The ADX212 and ADX218 are professional miniature gooseneck condenser microphones designed for applications such as podium, presentation, meetings and teleconferencing. Known for their clarity, excellent sound quality and ease of operation, the ADX212/218 have the ability to accurately capture and reproduce vocals from a comfortable distance.

The ADX212/218 are characterized with a uniformly controlled cardioid polar pattern, helping to isolate the speaker from other ambient noise in the room or on the stage. The ADX212/218 mics are also available in a hypercardioid polar pattern (models ADX212HC and ADX218HC) for tighter pick-up control. With a wide frequency range of 40 Hz - 18 kHz, the ADX212/218 provide natural sound with exceptional transient response.

The ADX212/218 mics are equipped with an integrated preamp circuitry built into the base of the XLR and may be mounted permanently via the supplied flange mount or with an optional base with an internal shock mount (SMT1218R). The mics may also be used on a standard mic stand or in conjunction with the Audix ATS-10 table stand with lighted on-off switch. Manufactured with very high standards and tight tolerances, the ADX212/218 features a machined brass body, field replaceable capsule and a variety of optional accessories. The ADX212/218 operate on phantom power of 9 - 52 Volts and are available in non-reflective black matte finish.

SUPPLIED ACCESSORIES:

Flange table mount (TM1218)
External foam windscreen (WS21218)

OPTIONAL ACCESSORIES:

ATS-10 - Table stand
SMT1218R - Rubber insulated shockmount
DCLIP - Mic stand adapter
APS-2 - Two-channel phantom power supply



FEATURES:

- Natural accurate sound
- Interchangeable capsule
- Low profile design
- Dual gooseneck sections allows for precise positioning
- Low noise electronics
- Available with cardioid or hypercardioid polar pattern

APPLICATIONS:

- Pulpit, podium
- Board meetings, teleconferencing
- Video, recording
- Room security or monitoring

REPLACEMENT CAPSULES:

- CPSADXC - Cardioid in black
- CPSADXHC - Hypercardioid in black



ATS-10



APS-2



SMT1218R



DCLIP

ADX212/218

SPECIFICATIONS:

Transducer Type	Pre-Polarized Condenser
Frequency Response	40 Hz - 18 kHz
Polar Pattern	Cardioid
	Hypercardioid
	(ADX212-HC or ADX218-HC)
Output Impedance	250 Ohms balanced
Sensitivity	24 mV / Pa @ 1k
Equivalent Noise Level	28 dB (A weighted)
Signal to Noise Ratio	66 dB
Power Requirements	9 - 52 Volts phantom
Maximum SPL	≥120 dB
Cable/Connector	3 pin gold plated
	male XLR connector
Polarity	Positive pressure on
	diaphragm produces
	positive voltage on pin
	2 relative to pin 3
Housing/Finish	Machined Aluminum and Brass /
	Black matte
Weight	107 g / 3.8 ounces (ADX212)
	119 g / 4.3 ounces (ADX218)
Length	407 mm / 16 inches (ADX212)
	533 mm / 20 inches (ADX218)

ARCHITECTS AND ENGINEERS SPECIFICATIONS:

The microphone shall be of the condenser type with a modular threaded capsule. The microphone shall be available in a cardioid and hypercardioid polar pattern and shall have a base terminating in a male XLR plug. The microphone shall operate on 9 - 52 Volts phantom power. The microphone shall have a sensitivity of 24 mV/ Pa and a nominal impedance of 250 ohms at 1 kHz. The microphone shall have a maximum SPL level of ≥120 dB and shall be fabricated from aluminum tubing, brass fittings, and coiled steel gooseneck material. The microphone capsule shall be 12 mm and available in two lengths: 407 mm and 533 mm. The microphone shall be the Audix ADX212 and ADX218.

OPERATION AND MAINTENANCE:

The ADX212/218 are low impedance microphones and should be plugged into a "mic level" input on your console, mixer, or recording device. The ADX212/218 require phantom power and will NOT operate without phantom power voltage (minimum of 9 - 48 Volts) which is available on most professional mic preamps and mixing devices. Avoid plugging or unplugging the microphone from a PA system unless the channel is muted or the volume of the system turned down. Failure to do so may result in a loud "popping" noise which could seriously damage the speakers in the PA system.

Changing Capsules: Capsules can easily be interchanged by simply screwing them on and off the capsule housing.

Important: The small copper lead on the housing must make contact with the small pin underneath the capsule in order to work. The lead contact can be stretched gently by hand if necessary.

Permanent Installation: The ADX212/218 can be conveniently plugged into any standard XLR female connector or receptacle. For permanent installation onto a table, podium or flat surface, use the supplied flange shockmount. The base of the ADX212/218 will fit securely into the flange and a standard XLR-f microphone cable or panel jack may be used. If further shockmount or isolation is required, it is recommended to use the optional SMT1218R rubber shockmount which requires boring out a 2 inch hole.

USER TIPS:

Speaking distance and angle of microphone: The two flexible portions of the microphone will enable you to position the mic according to height and speaking style of the user. In general, the microphone can be angled at 60-75 degrees towards the speaker and be 12-16 inches away from the mouth. A shorter distance can be used for a fuller sound or for weaker voices.



Windscreen: The supplied windscreen should be used to help minimize pop noise and breath noise. If breath or pop noise appears to be excessive, either move further away from the microphone or try speaker over the top of the microphone rather than directly into it.

Using with ATS-10 Table Stand: For ultimate flexibility and portability, the optional ATS-10 heavy duty table stand is ideal. Since the electronics for the ADX212/218 are built right into the base of the microphone, all that is necessary is to plug the mic directly into the table stand connector on the top of the base. The mic cable will be plugged into the back of the base and connected to a low impedance mic level input on the mixer or recording device. Remember that phantom power is required in order to operate. There is a noiseless 2 position on-off switch located in the table stand. The down position is 'on' and the up position is 'off'. The LED indicator light will be lit when the mic is turned on. This is not a push-to-talk system so you need not hold down the switch, just push and click to on or off position. A standard XLR-XLR microphone cable can be used to connect the ATS-10 to the mixer or recording device.


To use on microphone stand: The ADX212/218 may be used on any standard microphone stand by using the D-Clip. The XLR base of the microphone will snap securely into the D-Clip and can be used at any angle.

*Further miking techniques may be found on our website at www.audixusa.com

FREQUENCY / POLARS:

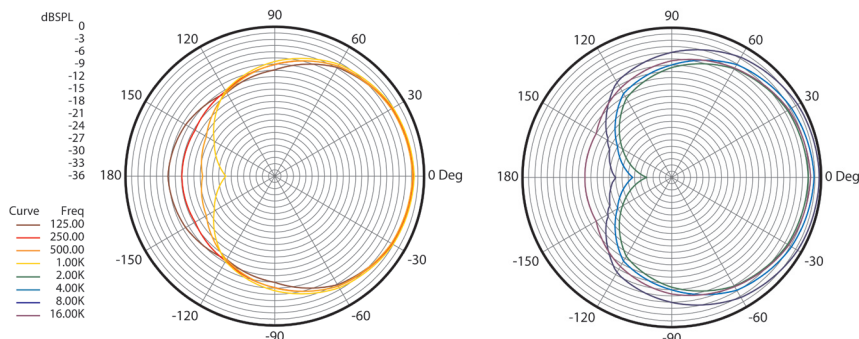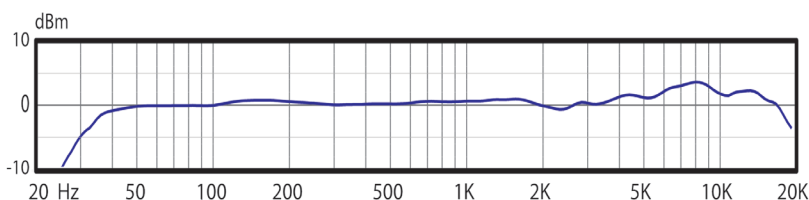

DIMENSIONS (mm):

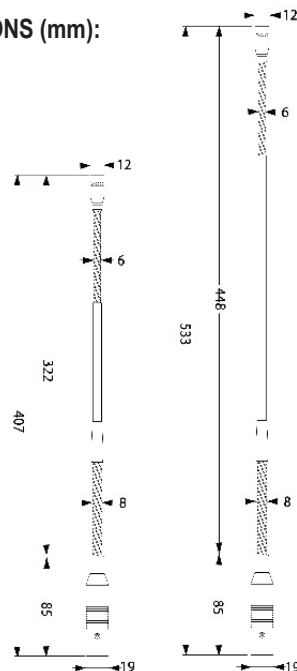

***All specifications subject to change without notice.

SERVICE AND WARRANTY:

This microphone is under warranty for a period of 3 years from any and all manufacturing defects. Should your microphone fail in any way, please contact the Audix Service department at 503-682-6933. A Return Authorization number is required before returning any products.

CARE AND MAINTENANCE:

The ADX212 and ADX218 are manufactured to exacting specs with roadworthy construction. However, the capsule is highly sensitive and should be handled with care. Avoid extreme temperatures and be sure to store your microphone in the pouch provided when not in use. Moisture of any kind can adversely affect the sound and performance of your microphone.

To register your microphone, please visit www.audixusa.com



www.audixusa.com Call: 503-682-6933 Fax: 503-682-7114
Audix Corporation 9400 SW Barber Street, Wilsonville, OR 97070